

To avoid injury and possible electric shock it is imperative that you  
**READ AND FOLLOW ALL SAFETY INSTRUCTIONS AND WARNINGS.**


### **Warning: This product must be used only with 24V DC or lower voltage**

This product is designed for low voltage only. Do not plug dimmer into anything more than 24 volts DC. Ensure input voltage does not exceed 60 watts at 24V.

This product is not waterproof. Do not plug dimmer into a wet plug or cord. If a plug or the unit gets wet, remove from service and allow it to dry before trying to use it again.

## Instructions

- 1** Unpack box and ensure dimmer is not damaged.
- 2** Rotate dimmer knob counter clockwise till you hear it “click” to the off position. Plug dimmer inline between the low voltage power supply and the LED light by connecting the male and female barrel jacks together. Ensure barrel jacks are plugged in tight.
- 3** Slowly turn the knob clockwise. Once you hear a “click”, power is being sent to the LED light. Continue to turn the knob to increase lighting levels until lighting level desired is achieved.

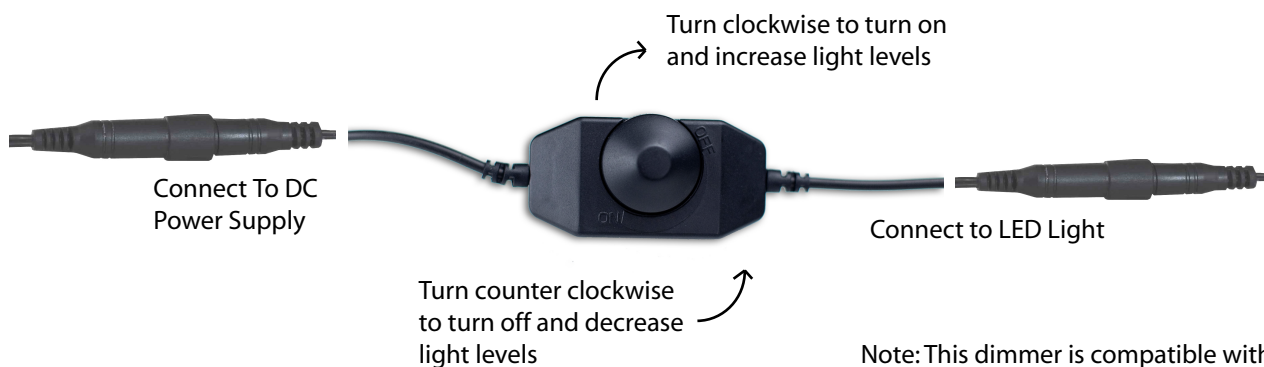

Note: This dimmer is compatible with Ecoxotic Stunner LED Strips, EcoPico LED Strips and Panorama Pro LED Modules. Dimmer is also compatible with most 24-hr timers.

**SAVE THESE INSTRUCTIONS**

[www.ecoxotic.com](http://www.ecoxotic.com)